
Datasheet: QCI-DS026

Date: 25 October 2024

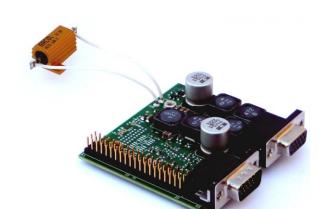

## SilverSterling S2-IG-xx

The SilverSterling<sup>™</sup> is an OEM servo controller/driver for QuickSilver's line of NEMA 11, 17, 23, and 24 frame, high torque, direct drive hybrid servomotors, but is also capable of driving third party DC brush and voice coil motors, 3 phase brushless motors, open loop step motors, and the new Mosolver<sup>™</sup> hybrid servo with internal resolver functionality\*. The SilverSterling controller/driver is available open framed (QCI-S2-IG-01) and enclosed (QCI-S2-IGH – see separate data sheet)

They are designed to servo QCI's I-Grade motors through a single connector. This single cable solution allows for easy installations and simple cable routing.

\* The Mosolver capability is present in units with a serial number of 2S1950 and higher. These units have differential amplifiers added to interface with the Mosolver sense windings.

The SilverSterling features a 15 pin interface connector including 4 IO, CAN, RS-485, and system power input. Four IO lines are brought out to the 15 pin connector. These may be selected by means of jumpers on the 60 pin header if a secondary mezzanine PCB is not utilized. If the expansion PCB is used, then these connector pins are free to be used by the customer as assigned by the expansion PCB design.

The SilverSterling also features a optional 60 pin header (special order) to allow simple and direct connection to expansion boards for both future QuickSilver product extensions and OEM custom interface printed circuit boards, eliminating the need for an additional cable and housing.

The 60 pin expansion header includes the ability to bring power to the board as well as access to internal +12v, +5v, and +3.3v power supplies. Access is also provided to two SPI ports (one of which may alternately be used as 4 simple IO), the internal CAN port, 4 configurable analog/digital IO (12 bit A/D), one I2C port (which may be alternately used as 2 IO), A

Property of QuickSilver Controls, Inc. Page 1 of 14 This document is subject to change without notice. 
<sup>®</sup> QuickControl® and QCl® are Registered Trademarks of QuickSilver Controls, Inc.

SilverLode™, SilverNugget™, SilverDust™, SilverSterling™, PVIA™, QuickSilver Controls™, and AntiHunt™ are trademarks of QuickSilver Controls, Inc..

# Quicksilver Controls, Inc.

secondary serial port (or alternately 3 I/O), motor encoder signals, one Capture Input (which can also serve as general purpose IO) and an additional 11 general purpose IO. Four connections to the 15 pin control connector are also brought out to the interface connector.

To utilize additional I/O, SPI, I<sup>2</sup>C, or secondary serial port brought out on the 60-pin header, requires custom firmware. Contact factory for firmware options.

Drive capability of each controller is two or three phase at 3.5A RMS / 5A peak. DC Drive capability is 6A (using both output phases connected in parallel).

# **System Overview**

#### Point-to-Point Moves

- Relative or Absolute
- Velocity or Time Based
- S-Curve

#### Advanced Motion Profile Moves

- Profile Move Commands
- Register Based
  - Position/Accel/Decel/Vel
  - Modify On-the-Fly

### Multi-Axis Linear Interpolation

- XYZ Coords Contained in Text File
- CANopen® used for local bus
- 1000+ Points Stored In NV Memory

#### Built-In Voltage Clamp

Regenerative Braking Resistor

#### Program and Data Storage

- 32K Non-Volatile Memory:
- 2000-3000 Program Lines
- User Data Examples
  - CAM Tables
  - Motion Profiles
  - Lookup Tables

#### Electronic Slip Clutch/Brake

- Variable Torque
- Wind/Unwind Applications

#### Anti-Hunt™

- Optionally use Open Loop While Holding
- No Servo Dither While At Rest

#### Communications

- RS-485 @ up to 230K Baud
- ASCII,Binary,Modbus®,DMX512
- Host Control While Servo in Motion
- CANopen® (Rev 03 SW and higher)

### **Programming Language**

- Easy, Menu Driven Interface
- Command Parameter Prompts
- No Syntax Errors
- User Namable I/O and Registers

### Advance PVIA™ Servo Loop

- 100:1 Inertial Mismatch
- Direct Drive Oversized Inertial Loads
  - Flywheels/Belt Drives
  - Typically Without Gearheads
- More Stable Than PID

#### Digital 4 Quadrant Vector Drive

DSP Driven for Reduced Noise

Multi-Task/Multi-Thread

### Compatible with QCI Motor/Encoders

- NEMA 11 Frame
  - o 4000 Counts/Rev Encoder
  - Up To 9 oz-in (continuous)
- NEMA 17 Frame
  - o 8000 Counts/Rev Encoder
  - Up To 43 oz-in (continuous)
  - IP50 or IP65
- NFMA 23 Frame
  - o 8000 Counts/Rev Encoder
  - Up To 300 oz-in (continuous)

# QuickSilver Controls, Inc.

## **Electrical Specifications**

### **Configurations**

The QCI-S2-IG-01 is a single controller unit, supplied as a board configuration. There are variants that allow use straight or right angle connectors for one or both of the D-sub connectors. Contact the factory for more information.

### **Input Power**

### Voltage

+12 VDC to +48 VDC, regulated. Device must be initialized for the actual operating voltage.

### **Reverse Polarity Protection**

Reverse polarity protection is available on the SilverSterling. (Note, however, if power supply is not floating, connecting the V+ input to Ground will cause this potential to be present at the common connection to communications and I/O lines, which may damage these lines or that to which they are connected.

### **Input Current**

4.5 Amps maximum for any input voltage, +12 VDC to +48 VDC per controller. Externally fuse with no larger than 8A slow blow.

### **Output Power**

### **Output/Driver Current**

5 Amp peak, 3.5A RMS x 2 phases; 6 A maximum for DC motors (using both phases in parallel) per controller (restricted to 4.5 A input current - such as driving a lower voltage motor from a higher voltage supply).

\* With Adequate Heatsink. (4.0A RMS x 2 phases typical 45C rise from 22C, ambient, 3.5A RMS x 2 typical 36C rise from 22C, using QCI-S2-IG heatsink with mounting feet horizontal, still air; Vertical orientation typically several degrees lower. Measurement on outside of heatsink, adjacent to driver.) Hot Surface – Risk of Burn. Heatsink may exceed 60C at full current if operated at higher ambient temperatures and/or with insufficient airflow.

#### **Maximum Output Power**

200 Watts continuous power with adequate heat dissipation, 48V operation.

### **Encoder Interface**

Designed to work with QCl's I-Grade motor/encoders. Quadrature differential signals are employed. Quadrature decoding used (i.e 2000 lines are decoded as 8000 counts.) Standard interface is 485 differential inputs. These same differential inputs are also used to interface to the Mosolver sense lines using the Encoder A, A-, B, B- inputs.

# Quicksilver Controls, Inc.

### **Inputs & Outputs**

### **Digital Inputs**

0 to +3.3 VDC. LVTTL level compatible.

On externally connected IO: Effective internal ~200K ohm pull-up impedance to +3.3 V. Inputs have a series 220 ohm / 3.3v protector to ground / Series 220 ohm ESD protection network. Do not exceed 5v on the inputs to prevent damage to the controller.

Internal IO present at header do not have additional protection; user must provide protection needed on expansion PCB.

### **Digital Output Voltage**

0 / +3.3 VDC.

### **Digital Output Current**

Sinking or Sourcing

2mA; (externally connected IO include a 440 series impedance).

### **Analog Inputs**

0 to +3.3 VDC input signal range.

12 bit ADC resolution (single).

Analog signal is read every servo cycle (120 µsec.) and the converted analog data is processed through a 5 ms filter to reduce noise & transients.

Analog channel #1 corresponds to physical I/O #4.

#### **Mezzanine Connector**

A 60 pin mezzanine connector has been provided to allow for easy interface to a user specific printed circuit board. Note that the signals on this connector are not protected, and the user must add protection to their circuit board for signals used. If the mezzanine board is not used, pins 20C-20B, 19C-19B, 18C-18B, 17C-17B must be jumpered to access IO1-IO4 at the DB-15HD SIP connector. (These signals must be connected on the mezzanine board if these functions are wanted at the four IO pins, otherwise other functions can be routed to the four external connections. Note that the Mezzanine connector may be unstuffed on S2-IG units not having a Mezzanine board.

### **Clamp Resistor**

The QCI-S2 comes with a built in regenerative voltage clamping circuit to prevent damage to the driver from regenerated power associated with stopping a load. The QCI-S2-IG-01 has this clamping resistor attached. The user is responsible for affixing this clamping resistor to a suitable heatsink when installing the PCB.

# Quicksilver Controls, Inc.

### **Communications**

#### **Serial Interface**

RS-485 multi-drop, Reduced unit load accommodates up to 255 nodes. Protected up to +/- 70v not operating, +/-30V operating.

Note: RS-485 requires a nominal 120 ohm ½ W termination resistor at each end of the network. This termination is not provided onboard and must be provided by the user. Note: Short runs may work adequately with a higher impedace termination. The S2-IG does not require a biased termination, but other attached devices may require a bias for proper operation.

#### **Protocols**

8-bit ASCII, 9-bit binary, Modbus®, and DMX512

### **Hardware Configuration Settings**

Available Baud Rates: 2400, 4800, 9600, 19.2k, 28.8k, 57.6k, 115.2k or 230.4k

(250k only for DMX512)

Data Bits: 8 (9 bits for binary)

Stop Bits: 1.5 or 2

Parity Bit: None (Modbus supports None, Even, Odd)

#### **CAN** interface

The CAN bus connection is NOT isolated, but does include transceivers which have an extended +/- 80v fault protection range. The CANopen® communications protocol allows the unit to function as a master, slave, or peer on a CANopen network. See the SilverLode CANopen User Manual for details on the CANopen protocol. This protocol operates simultaneously and independently from the standard serial protocols.

Note that a 120 ohm ½ W termination resistor is required at each end of the CAN network (only two per system). This termination is not provided onboard the controller and must be provided by the user. For the CAN bus, this termination is not optional.

CANopen® and CiA® are registered community trademarks of CAN in Automation e.V.

### **STATUS LIGHTS**

Three status lights are provided on each end of the box. Two sets of status lights are provided to make it easier to see them with the box mounted in different orientations. The Blue Power light indicates power is connected to the unit. The Red COMM LED indicates the unit is ready (no program running) by a dim level, it is off between communications if a program is running. It blinks brightly during each incoming communications frame. The Green Status light varies in intensity with the motor torque (negative torque dimmer, positive torque brighter); if Done Bit is configured the LED lights to indicate Done (See Set Done Bit command), are also used to blink error codes if a fault is detected (and the Done bit is not configured).

# Quicksilver Controls, Inc.

## **Environmental Specifications**

### **Operational Temperature**

-10 C to +70 C Hot Surface – Risk of Burn. Heatsink may exceed 60C at full current if operated at higher ambient temperatures and/or with insufficient airflow.

### **Storage Temperature**

- 40 C to +85 C

### **Humidity**

Continuous specification is 95% RH non-condensing.

#### Shock

Limitation is approximately 50g/11ms.

Specifications subject to change without notice. See <a href="www.QuickSilverControls.com">www.QuickSilverControls.com</a> for current information.

### Mounting the QCI-S2-IG-01

The Controller Driver is designed to be mounted between guides that support the edges of the PCB not having LEDs or connectors. The guides should not overlap more than .025 over the edge of the PCB. The driver IC is the tallest device on the back side of the board and defines the distance between the PCB and the heat sink. Two 4-40 nuts are positioned equally about and on the center line of the driver to allow access from the outside of the heatsink to pull the PCB tight to the heatsink. If the third mounting nut (adjacent to the mezzanine connector), an appropriate non-conductive spacer must be used to minimize twisting/flexing of the PCB. The connector plane of the motor and SIP connectors is the reference for alignment and the stabilizer for the connector end of the PCB.

Mounting procedure: A thin layer of silicone thermal grease should first be applied to the exposed metal thermal contact of the driver IC. The driver chip should be held flat to the heatsink, and both screws tightened just finger tight (~2 in-oz). We suggest using at removable thread lock material (such as purple Loctite TM) on the screws. Next, start any other mounting screws, such as the third mounting hole or the screws in the D-sub connectors. Next tighten the two screws adjacent to the driver chip alternately with an ultimate torque of 20 in-oz (0.14Nm) using a torque watch. It is important to have the thermal interface side of the driver flat to the heatsink before tightening, as tightening a screw with the IC cocked results in a significant leverage which can damage the driver chip and distort the PCB, possibly breaking components and/or solder joints. Overtightening can also damage the driver and PCB.

Proper ESD handling techniques including grounding straps should be used while handling the open frame printed circuit board to prevent damage. The D-sub shells are grounded and should be the first contact to the PCB as an added protective measure.


THE THERMAL PAD ON THE DRIVER IS INTERNALLY CONNECTED TO THE DRIVER SUBSTRATE AND NEEDS TO BE ATTACHED TO A GROUNDED HEATSINK. Connecting

QuickSilver Controls, Inc.

# Quicksilver Controls, Inc.

the mounting bracket for the D-sub connectors to the heatsink will provide the needed grounding path. Do not anodize the heatsink directly opposite the driver chip nor the screw holes!

### **Mechanical Dimensions**

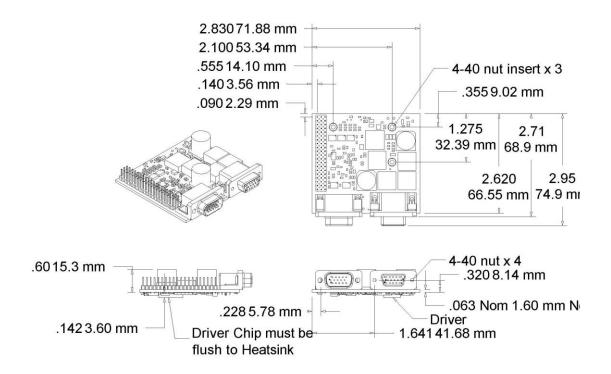

#### Note:

Mechanical drawing shows optional 60 pin header. Unit is normally supplied with a 10 pin connector used for manufacturing. 60 pin is available as a special order.

# Quicksilver Controls, Inc.

### **Connector Data**

### SilverSterling Interface Port (SIP)

This port provides Power, RS-485 serial communications, CAN communications, and four IO. It is not backwards compatible with the SilverDust or SilverNugget. The IO is nominally 0-3.3v and should be limited to no more than 5v to avoid damage. The CAN and RS485 have extended input voltage range to improve robustness. Power ground and logic ground are internally connected.




	1	V+ (12-48 VDC)	
	2	RS-485A	
	3	+5V OUTPUT 100mA	
4 I/O #3		I/O #3	
5 CAN_H		CAN_H	
	6	POWER GROUND	
	7	V+ (12-48 VDC)	
8 LOGIC GROUND		LOGIC GROUND	
	9 I/O #2		
	10	LOGIC GND (CAN GND)	
	11	POWER GROUND	
	12	RS-485B	
	13	I/O #1	
	14	I/O #4	
	15	CAN_L	

#### **Motor Interface**


QuickSilver Controls recommends our QCI-C-D15P-D15S-nn (nn=length in feet) cable to interface between the motor and controller.

The motor temperature can be monitored and limited by using a DS1822 digital thermometer, with ground connected to Encoder Ground, Power to +5v encoder power, and IO connected to Motor Memory Access. The motor temperature can be measured in 1/16 C increments in the lower half of register 241, and the over-

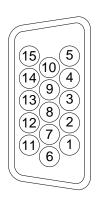

4	Mata D.		
<u> </u>	Motor B+		
2	Chassis Ground		
3	+ 5V Encoder Power		
4	Encoder A -		
5	Encoder B -		
6	Motor A +		
7	Motor B -		
8	Encoder Z +		
9	Encoder A +		
10	Encoder Z -		
11	Motor A -		
12	Chassis Ground		
13	Encoder B+		
14	Encoder Ground		
15 Motor Memory Access			

temperature threshold can be configured via the upper half of register 241 (also in degrees C \* 16).

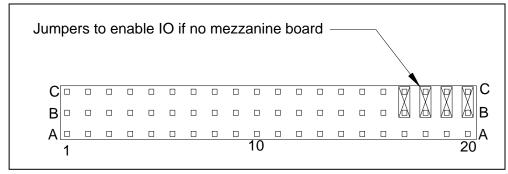

custom boards added to box), or S2-IG-01.

Mezzanine Header
The optional
Mezzanine Header
provides access to
additional signals
when adding a
customer feature
board to the S2-IG
(Contact factory for

Four jumpers come standard on the S2-IG-01 to connect the external IO (after input protection network) to the internal IO on the processor. Note that the signals on this QuickSilver Controls, Inc.

Page 9 of 14

# Quicksilver Controls, Inc.

	A	В	С
1	+VP	VPsen	RxD_A - Primary serial port
2	+VDr = Internal	+VDr = Internal	TxD_A - Primary serial port
	driver voltage	driver voltage	
3	Power Ground (0v)	Power Ground (0v)	DE_A - Primary serial port
4	+12v @ 10mA	+5v @ 100mA	RxD_A ENA* (low to disable
			internal 485)
5	SPIA Slave In	TRST -	SPIB Slave In Master Out or
	Master Out	RESERVED	IO
6	SPIA Slave Out	TDI - RED*	SPIB Slave Out Master In or
	Master In		IO
7	SPIA Clock	TDO - GREEN*	SPIB Clock or IO
8	SPIA Chip Select*	TMS - Output only	SPIB Chip Select* or IO
9	CSO A - Additional	+3.3v @ 100mA	RxD_B - Seconadary serial
	Chip select		port or IO
1	CAN TX (internal	TCLK - Reserved	TxD_B - Secondary serial
0	signal)		port or IO
1	CAN RX (Internal	SDAA - I2C or IO	DE_B - Secondary serial port
1	signal)		or IO
1	Digital Ground	SCLA - I2C or IO	ENC_A - buffered from
2			motor encoder
1	ADCINA2 - Digital IO	Digital Ground	ENC_B - buffered from motor
3	or Analog		encoder
1	ADCINB2 - Digital IO	GPIO1	ENC_Z - buffered from motor
4	or Analog		encoder
1	ADCINA4 - Digital IO	GPIO3	ENC_S - high speed capture
5	or Analog	001044	of encoder or IO
1	ADCINB4 - Digital IO	GPIO14	CAP_1 - High speed capture
6	or Analog	1.1	or IO
1	No Connect	Internal IO4	To SIP pin 14 via protection
7	No Connect	Internal IO4	network, ADC1 via protection
1 8	No Connect	Internal IO1	To SIP pin 13 via protection network
1	3.3v REF	Internal IO3	To SIP pin 4 via protection
9	3.5V INE1		network
2	DRIVE ENABLE	Internal IO2	To SIP pin 9 via protection
0	(pull low to disable)	miomarioz —	network
	(pair low to disable)		HOUVOIN

connector are not protected and the user must add protection as needed to their customization board in order to use these signals.

Mezzanine Connector Pinout. Contact factory to use additional IO


**NOTE:** GPIOXX pins refer to the processor pin naming convention. IOx pins follow the I/O numbering of the I/O commands within QuickControl.

# Quicksilver Controls, Inc.

### **Input Power via Mezzanine Connector**

Two alternate configurations are available if they provide power through the mezzanine connector.

The first configuration, shown right, connects the power supply input (12-48V) to Pin 1A referencing power ground on Pins 3A and 3B. Pin 1A connects directly to power pins 1 and 7 of the DB15HD SIP port. Note that the power is then available at the DB15HD SIP connector, so care needs to be taken to prevent anything from touching the supply on the exposed power pins. The connector pin's current rating must in consideration and must not be exceeded. The internal diodes isolate the supply from the regenerated power, allowing the clamp to operate.

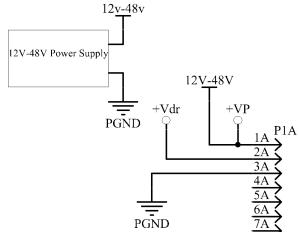

The second configuration, shown right, connects the power supply input (12-48V) to +Vdr (Pins 2A & 2B) through a high power Schottky diode. The high power Schottky diode (60V/6A) keeps the internal driver regenerated power from causing the power supply to shut down and enables the clamp circuit to operate properly.

It is also necessary to connect a lower power Schottky diode (60V/100mA) from the input power supply to the +VP\_S (Pin 1B) to enable proper clamp circuit

operation. (Clamp will always be ON if this diode is not present!)

Power is isolated from DB15HD SIP port, pins 1&7 with this configuration.

# QuickSilver Controls, Inc.

### **Recommended Components**

### SilverSterling S2-IG-01 Start-Up Materials

For first time users, QCI recommends purchasing the following items to aid with use of the S2-IG controller:

- 4' DB15HD Motor I/F Cable (QCI-C-D15P-D15S-04)
- Breakout Module for SilverSterling (QCI-BO-S1)
- USB to RS485 converter (QCI-USB-RS485)
- Desired Motor

Optionally:

- 240W, +48V Power Supply (SP-240-48)
- Power Cable (QCI-C-ACP-FLY-6)

Software is free and available from our website.

See technical document QCI-TD072 on our website for details.

#### **Accessories:**

#### 1. Controller/Driver

SilverSterling S2-IG (QCI-S2-IG) is our standard closed frame controller/driver designed to servo QCI's I-Grade motors through a single connector.

### 2. Basic Breakout (QCI-BO-S1)

QCI recommends purchasing a breakout to simplify wiring power, RS-485 communication, CAN and 4 I/O. The breakouts connect directly to the SilverSterling's 15-pin interface port (SIP).

#### 3. Motor I/F Cable

For standard system, this D-sub type cable goes between the motor and the controller. The generic part number is QCI-C-D15P-D15S-nn. Replace the last two digits "nn" with length of cable in feet (i.e. -10 for 10 feet). Standard lengths are 1, 2, 4, and 10 feet.

For IP65 system, a special IP65 cable goes in between the motor and the controller. The motors and cables are IP65, but not the controller/driver. The generic part number is QCI-C-D15P-T14S-nn. Replace the last two digits "nn" with length of cable in feet (i.e. –10 for 10 feet).

#### 4. Motor

The SilverSterling S2 is capable of driving any NEMA 11, 17, 23 and 24 I-Grade motor/encoder. See the following datasheets for more information:

QCI-DS007: NEMA 17 I-Grade Motor/Encoder QCI-DS008: NEMA 23 I-Grade Motor/Encoder QCI-DS017: NEMA 11 M-Grade Motor/Encoder

QuickSilver Controls, Inc.

# Quicksilver Controls, Inc.

QCI-DS028: NEMA 24 I-Grade Motor/Encoder

QCI-DS029: NEMA 23 Mosolver™

QCI-AN066: BEI voice coil motors with the SilverSterling

### 5. Power Supply

Power supply selection is motor dependent, but the following will work with all the 17 and 23 frame motors.

SP-240-48 (48V, 5A, 240 Watt)

# Quicksilver Controls, Inc.

### **Part Numbers**

SilverSterling™ 1G Controller/Drivers						
Driver	Controller	Options				
QCI-S2-IG-xx: 4 A RMS Per Phase  Best paired with I-Grade Motor/Encoders  3.5A RMS per phase  5A peak per phase  4.5A @ 12v-48v  Included Clamp circuit and resistor.	SilverSterling S2-IG-xx  4 TTL Inputs or Outputs  1 Analog input (IO#4)  1 PWM output (IO#2)  Use QCI-BO-S1A  ASCII, 9 bit Binary, Modbus®, DMX-512®  CANopen® (with Rev 03 sw)  DB15HD (pin): SIP Connector  DB15HD (socket): Motor I/F	<ul> <li>O1 – Board Only         <ul> <li>Requires user to properly heat sink.</li> </ul> </li> <li>V1 – Board Only         <ul> <li>Motor Port with Vertical DB15HD connector</li> <li>SMI Port with Right Angle DB15HD connector</li> </ul> </li> <li>V2 – Board Only         <ul> <li>Motor Port with Right Angle DB15HD connector</li> <li>SMI Port with Vertical DB15HD connector</li> </ul> </li> </ul>				
Example: For IG board only						
QCI-S2	IG	01				
Selection creates part number: QCI-S2-IG-01						

**Example Part Numbers:** 

QCI-S2-IG-01

QCI-S2-IG-V1

QCI-S2-IG-V2

QCI-S2-X2-IG

Note: S2-IGH has its own data sheet.

### **Contact Information**

QuickSilver Controls, Inc. 990 N Amelia Ave San Dimas, CA 91773 909-599-6291 or (888) 660-3801 909-599-6289 FAX www.QuickSilverControls.com